

# Jazzmate

>>> User's Manual



# Contents

<b>A. Package Content</b>	
<b>B. Minimum System Requirements</b>	P1
<b>C. LED Indicator</b>	
<b>D. Installation</b>	P2
<b>E. Using your Jazzmate</b>	
<b>Introduction</b>	P3
<b>Unplug Procedure</b>	P4

## **A. Package Content**

- "Jazzmate" 2.5" HDD Enclosure
- USB 2.0 cable (Model:EB211S / EB211ES)
- eSATA cable (Model:EB211ES)
- USB 3.0 cable (Model:EB211U3)
- User's manual
- Silicon pad





## **B. Minimum System Requirements**


1. Windows XP/Vista, and Windows 7
2. Mac OS 10.2, 10.3, and 10.4 or higher
  - \* USB 3.0 was not available for Mac OS at the time this manual was written.
3. Computer with USB 3.0, 2.0 or 1.1 interface.  
eSATA port is required for EB211ES

## **C. LED Indicator**

- Power : Blue LED
- Access (Read/Write) : Blue LED flash

## **D. Installation**

1. Shift the lock bar from "Lock"  to "Unlock" .
2. Slide the upper case off.
3. Connect the SATA HDD to the SATA connectors on the PCBA.
4. A. Make sure they are tightly connected.  
B. Slide the upper case back.
5. Shift the lock bar from "Unlock"  to "Lock" .

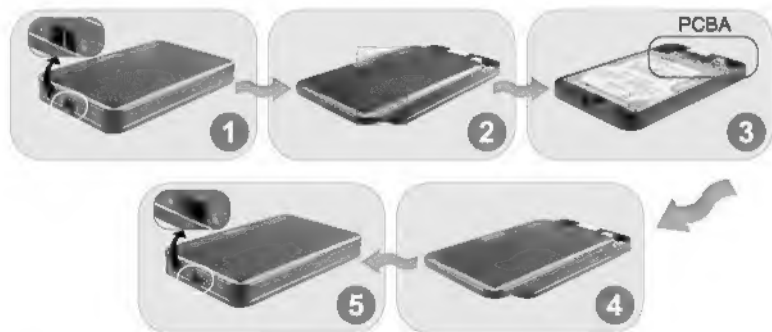

## ***E. Using your Jazzmate***

### ***Introduction***

- If the HDD is for initiate use, please format it.
- The eSATA interface does NOT supply the power to the device. So please make sure the USB cable is also connected when using eSATA. (EB211ES only)
- If your computer fails to detect the device when connecting eSATA, please try "Computer Management"—"Disk Management"—"Action"—"Rescan Disk" to find the device.

## ***Unplug Procedure***

- **Unplug Procedure on a PC (Microsoft Windows)\***
  1. Click on the taskbar icon for the external hardware
  2. Choose the external HDD and confirm to remove it
  
- **Unplug Procedure on a Macintosh (Apple Mac OS)\***
  1. Drag the external HDD icon into the trash bin, then you can remove it.
  
- **Unplug Procedure of eSATA**

eSATA connection is hot swappable only if motherboard supports this feature. Otherwise, we suggest you to unplug the connection after the system is turned off.

\*For safe removal of your drive and assure no data is lost, always follow the unplug procedure. If not, errors message might show up.

© Copyright 2010 Enermax Technology Corporation. All Rights Reserved.

The information contained in this manual is believed to be accurate and reliable.

Enermax Technology Corporation assumes no responsibility for any errors contained in this manual. Enermax Technology Corporation reserves the right to make changes in the specifications and/or design of this product without prior notice.

The diagrams contained in this manual may also not fully represent the product that you are using and are there for illustration purposes only.

All mentioned company and product names are trademarks or registered trademarks of their respectable owners.



# Jazzmate

[www.enermax.com](http://www.enermax.com) [forum.enermax.com](http://forum.enermax.com)